





BARBERTECH

VIDEO PRODUCTS
THE FUTURE OF VIDEO PRODUCTS


EZ Prompter LCD Mount

What's Included:

If you purchased the EZ Prompter LCD Mount by itself, you will have:






a. (1) EZ Prompter LCD Mount	 A black metal LCD mount assembly consisting of two plates of different lengths, one on top of the other, connected by four screws. The top plate is shorter than the bottom plate, and they are offset.
b. (4) Philips Head Screws	 Four silver-colored Philips head screws of the same size, arranged in a row.
c. (1) Thumb Screw	 A black thumb screw with a T-shaped handle and a threaded end.
d. (1) Allen Wrench	 A silver-colored L-shaped Allen wrench.

If you purchased the EZ Prompter LCD Mount with the LCD Monitor, you will have items A-D plus:

e. (1) LCD Monitor with accessories (power cord, etc.)	 The back of a silver LCD monitor with an HP logo and a yellow sticker. The monitor is shown from the rear view, highlighting the mounting holes and ports.
--	---

The EZ Prompter LCD Mount is one unit. It will arrive to you already assembled. This means that there will be two plates of different lengths sitting on top of another. The EZ Prompter LCD Mount will arrive in a collapsed position which is essential for protecting the mount when shipping.

EZ Prompter LCD Mount Instructions

<p>1. Using the allen wrench provided (d), Loosen the allen screws that hold the mount together and raise the plates apart from each other.</p>		
<p>2. Tighten one of the allen screw so your set-up will be stable.</p>		
<p>3. Using a screwdriver and the 4 Philips Screws (b) provided , attach the LCD Monitor to the bottom of the LCD Mount (e).</p>	 	
<p>4. This is how your set-up will look like.</p>		
<p>5. Using the thumb screw provided (c), attach your camera to the LCD Mount.</p>		

6. Attach the EZ Prompter to you camera.



7. **Be sure to support the weight of your camera while doing this step.** Using the allen wrench (d) provided, Loosen the allen screws, and adjust the LCD Mount so you EZ Prompter has the appropriate height and distance from your monitor.





8. This is how your set-up will look like.



9. Line up your EZ Prompter to your LCD monitor. The middle of the LCD Monitor should reflect in the middle of the lens.

10. Tilt the unit and put a pen under it, This is how you will find the balance point. Move the unit back and forth until you find the balance point.

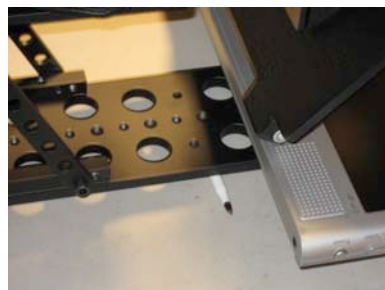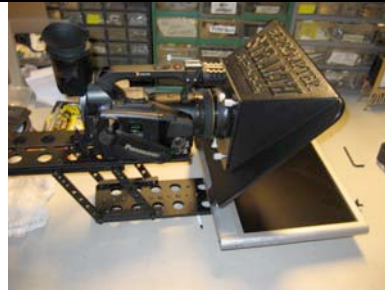

11. Now that you know where your balance point is, you can now attach the quick release plate of your tripod to your LCD Mount.



12. Put the LCD Mount set-up on your Tripod.
13. You're now set and ready to go!.



**Thank you very much for using BarberTech Video Products!
We appreciate your business and
We look forward to working with you in the future.**